

How to Change the Chiller Digital Controller

STEP 1



Put both hands on top of the controller and press down & forward to detach controller from chiller housing.

STEP 2



The controller will unlock and will slide out.

STEP 3



Pull out the controller.

STEP 4



Disconnect the Probe Sensor Wire.

STEP 5



Disconnect the Power Supply Wire.

STEP 6



Reconnect with new replacement controller and connect Probe Sensor Wire & Power Supply Wire.

STEP 7



Insert controller back into chiller housing.

* For Additional assistance please call or email us.
Email: sales@bjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web: www.bjlighting.com