

How to Change the Chiller Fuse

STEP 1



Unplug powercord from rear of chiller to gain access to fuse compartment.

STEP 2



Insert (flat head) screwdriver and pull forward to remove fuse cover.

STEP 3



Pull out fuse cover that contains the spare fuse.

STEP 4



The "Spare Fuse" is shown on the left and the "Fuse in Use" is on the right.

STEP 5




Remove the "Fuse in Use" as shown above.

STEP 6




Insert the "Fuse in Use" into the side compartment to push out the "Spare Fuse".

STEP 7

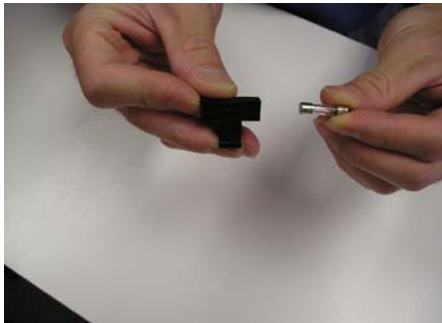

Remove "Spare Fuse" from side compartment.

STEP 8

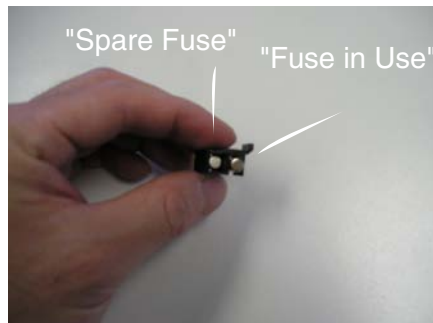

Insert the "spare fuse" into the "fuse in use" slot.

STEP 9



Insert fuse cover and push in.

* For Additional assistance please call or email us.
Email: sales@jbjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web: www.jbjlighting.com