



CUBEY

NANO
MIDSIZE


CABINET STAND

**ASSEMBLY
INSTRUCTIONS**

WWW.JBJLIGHTING.COM

TABLE OF CONTENTS

Parts	'-(
Step 1 Mounting Hinges)
Step 2 Right Side Panel to Back Panel)
Step 3 Left Side Panel to Back Panel	*
Step 4 Support Brace to Cabinet	+
Step 5 Top Panel To Cabinet	9

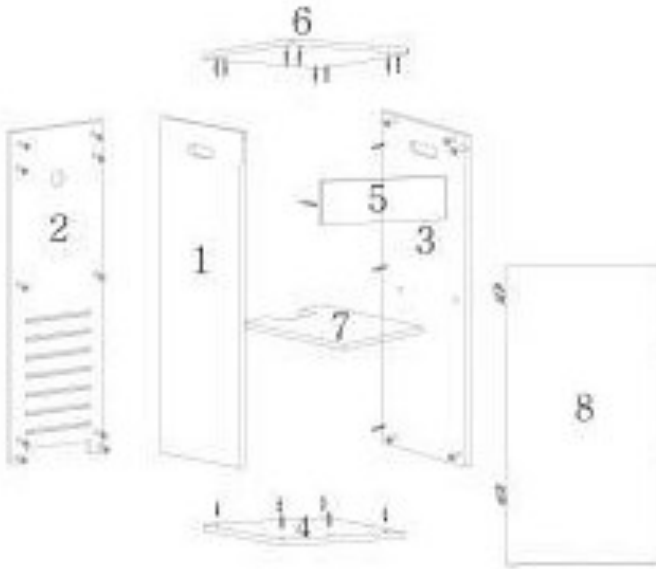PARTS EXPLODED VIEW & IDENTIFICATION

- | # | Name |
|---|----------------------------|
| 1 | LEFT SIDE PANEL |
| 2 | BACK PANEL W/ CHILLER VENT |
| 3 | RIGHT SIDE PANEL |
| 4 | BOTTOM PANEL |
| 5 | FRONT SUPPORT BRACE |
| 6 | TOP PANEL |
| 7 | SHELF |
| 8 | DOOR |

HARDWARE INCLUDED



DOOR HINGE




CAMLOCKS



CAMLOCKS SCREWS



1/2" SCREWS



RUBBER CABINET FEET

STEP 1
Mounting Hinges


16—1/2" Screws

Mount Hinges on the Door

**STEP 2**
Right Side Panel to Back Panel

15—Comlocks & 3 Camlock Screws

- Insert 3 Camlock Screws into Right Side Panel
- Insert 5 Camlocks into Right Side Panel
- Insert 10 Camlocks into Back Panel
- Attach Right Side Panel to Back Panel
- Secure Right Side Panel to Back Panel by tightening Camlocks

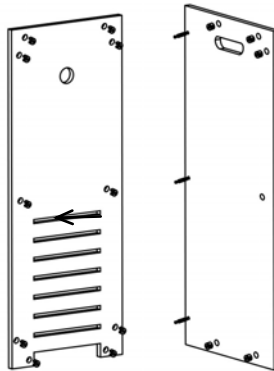


Bottom

STEP 3**Left Side Panel to Back Panel**

5—Camlocks & 3 Camlock Screws

- Insert 3 Camlock Screws into Right Side Panel
- Insert 5 Camlocks into Right Side Panel
- Attach Left Side Panel to Back Panel
- Secure by tightening Camlocks

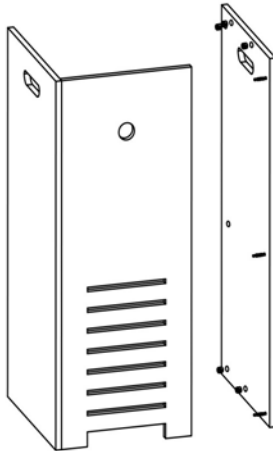


STEP 4

Support Brace to Cabinet

4—Camlocks

- Insert 4 Camlock Screws on Support Brace
- Attach Support Brace to Cabinet
- Secure Support Brace to Cabinet by tightening Camlock Screws

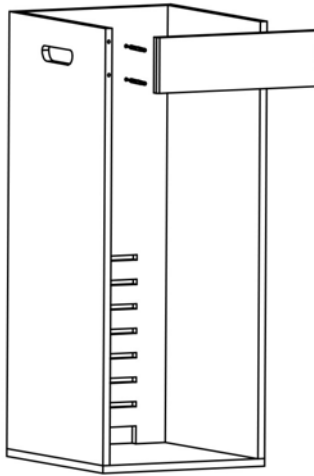


STEP 5

Top Panel to Cabinet

6 Camlock Screws

- Insert 6 Camlock Screws to Top Panel
- Attach Top Panel to Cabinet
- Secure Top Panel to Cabinet by tightening Camlocks

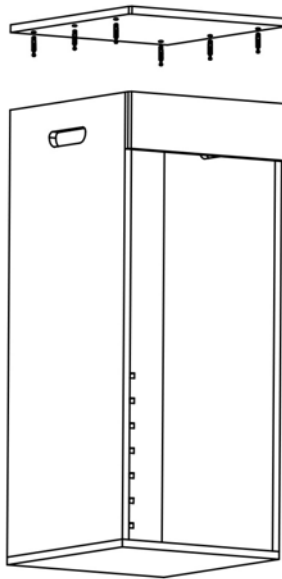

NOTE: Make sure to align predrilled shelf holder holes from Left Side Panel to Center Support Panel